



TurnOflex™

Cleaning instruction

Maintenance & cleaning

Cleaning


The recommended frequency of cleaning will depend on the stock rotation speed and on the type of food product displayed. For instance, fat or oily products require more frequent cleaning.

Daily Cleaning

For regular cleaning a disinfectant based on Chlorine Dioxide (ClO₂) is preferable.

Do not use an alcohol-based disinfectant.

Alcohol-based disinfectants will make the plastic brittle and shorten the lifetime of the bin.

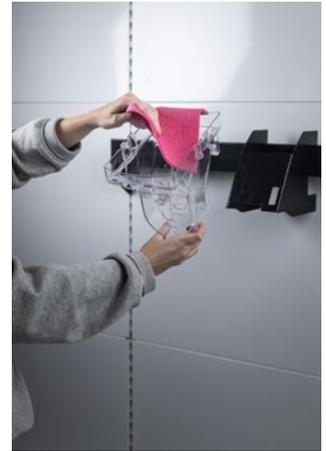

Total cleaning

Disassemble all the parts of the TurnOflex™, then:

Wash with soap and warm water

Hand washing is preferable to limit exposure to high temperature.

Or use a dishwasher


Settings should be at lowest possible temperature and shortest duration (below 50°C and always in the top tray).



Some customers prefer not to do the cleaning themselves - your HL Display representative can help you source a cleaning service for your bulk bins.

Component overview

The **TurnOflex™** consists of these components.

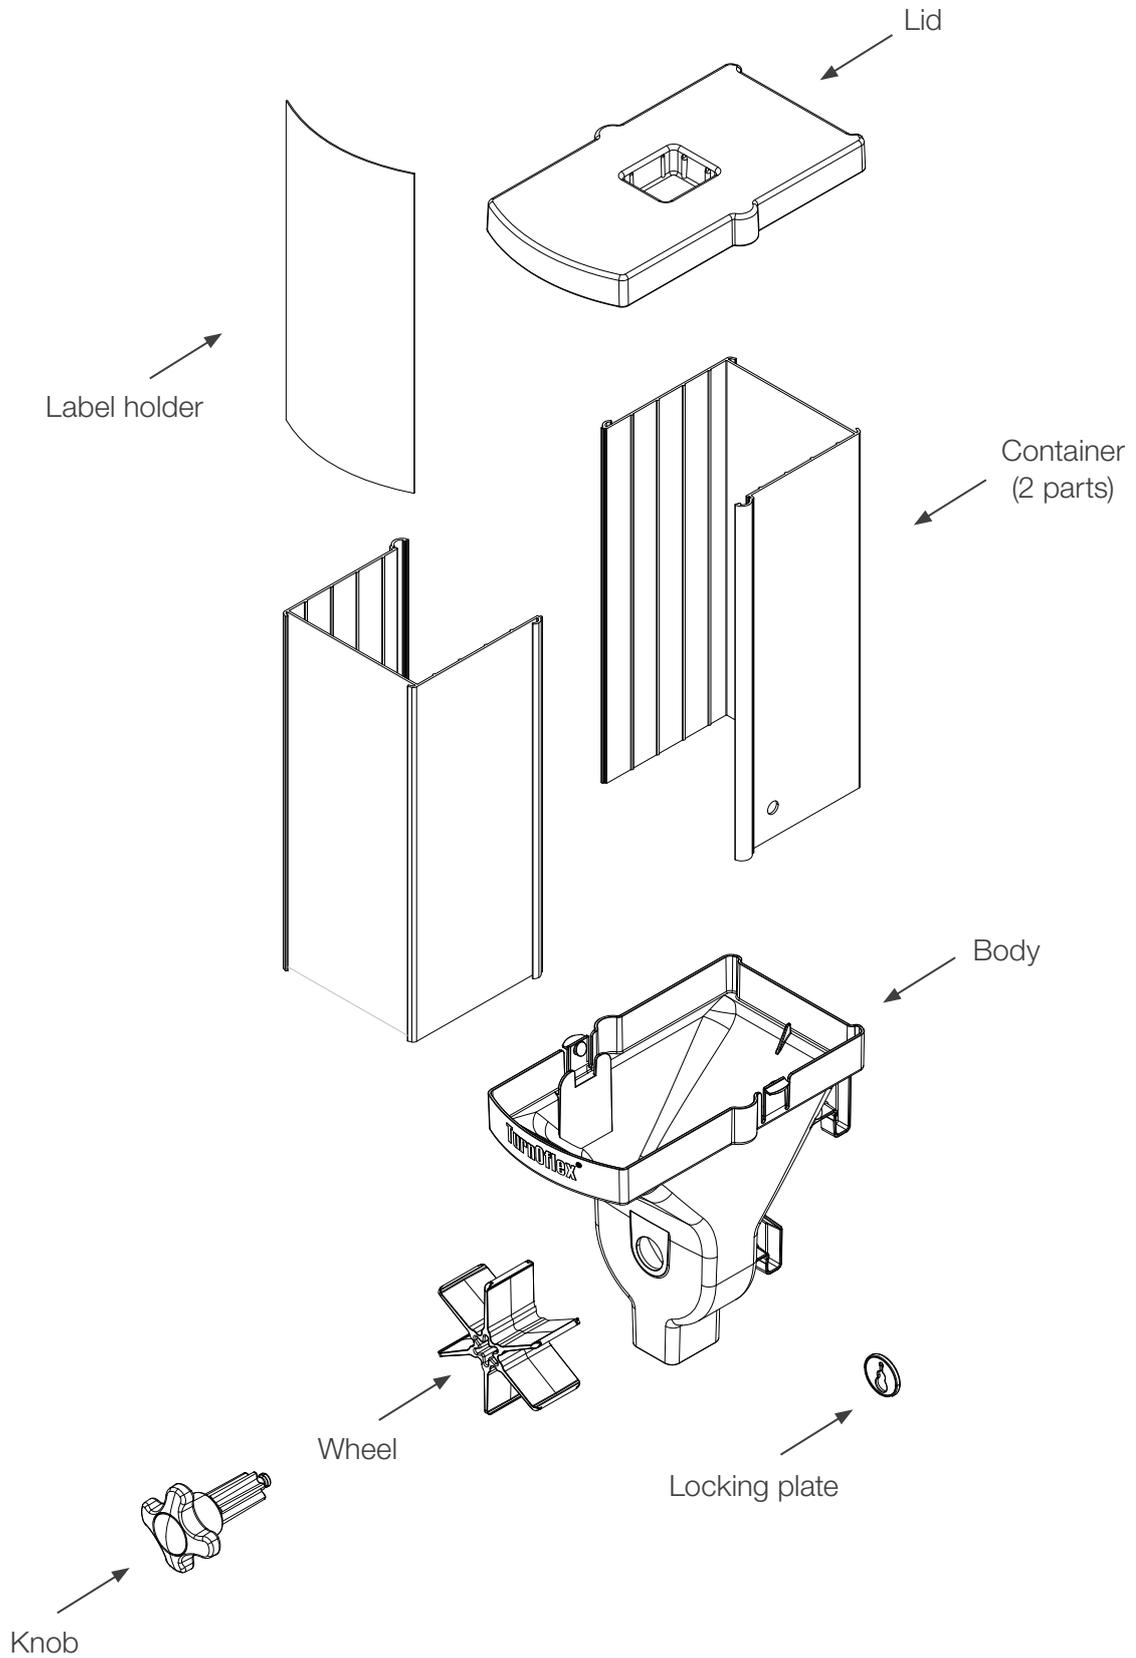

TurnOflex™ disassembling

To disassemble, follow the steps below:

- 1 Take off the lid.




- 2 Release the container from the body by pulling out the notches on each side



- 3 Remove label holder



- 4 Separate the 2 parts of the container

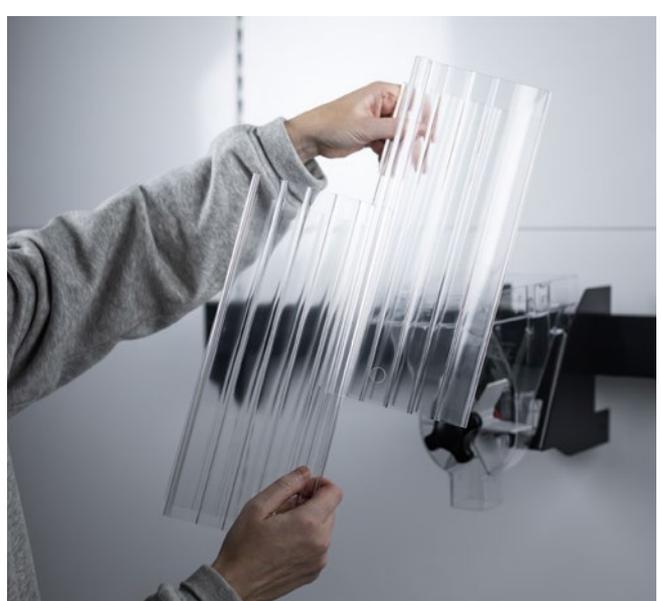

TurnOflex™ disassembling (cont.)

5 Press up the locking plate to release it



6 Remove the locking plate



7 Remove knob from wheel and body



8 Remove the wheel



TurnOflex™ assembling

To assemble, follow the instructions below:

1 Insert wheel into the body



2 Push knob into wheel and body



3 Push down



4 Attach the 2 parts of the container to each other by sliding them together.



TurnOflex™ assembling (cont.)

5 Slide the label holder into place



6 Fix the container to the body



7 Re-attach the lid



HL DISPLAY AB

Cylindervägen 18 Box 1118
131 26 Nacka Strand, Sweden

Tel +46 8 683 73 00

www.hl-display.com
info@hl-display.com

