



Pribox™

Cleaning instruction

Maintenance & cleaning

Cleaning

The recommended frequency of cleaning will depend on the stock rotation speed and on the type of food product displayed. For instance, fat or oily products require more frequent cleaning.

Daily Cleaning

For regular cleaning a disinfectant based on Chlorine Dioxide (ClO₂) is preferable.

Do not use an alcohol-based disinfectant.

Alcohol-based disinfectants will make the plastic brittle and shorten the lifetime of the bin.



Total cleaning

Disassemble all the parts of the Pribox™.

Wash with soap and warm water

Hand washing is preferable to limit exposure to high temperature.

Or use a dishwasher


Settings should be at lowest possible temperature and shortest duration (below 50°C and always in the top tray).



Some customers prefer not to do the cleaning themselves - your HL Display representative can help you source a cleaning service for your bulk bins.

Component overview

The **Pribox™** consists of these components.

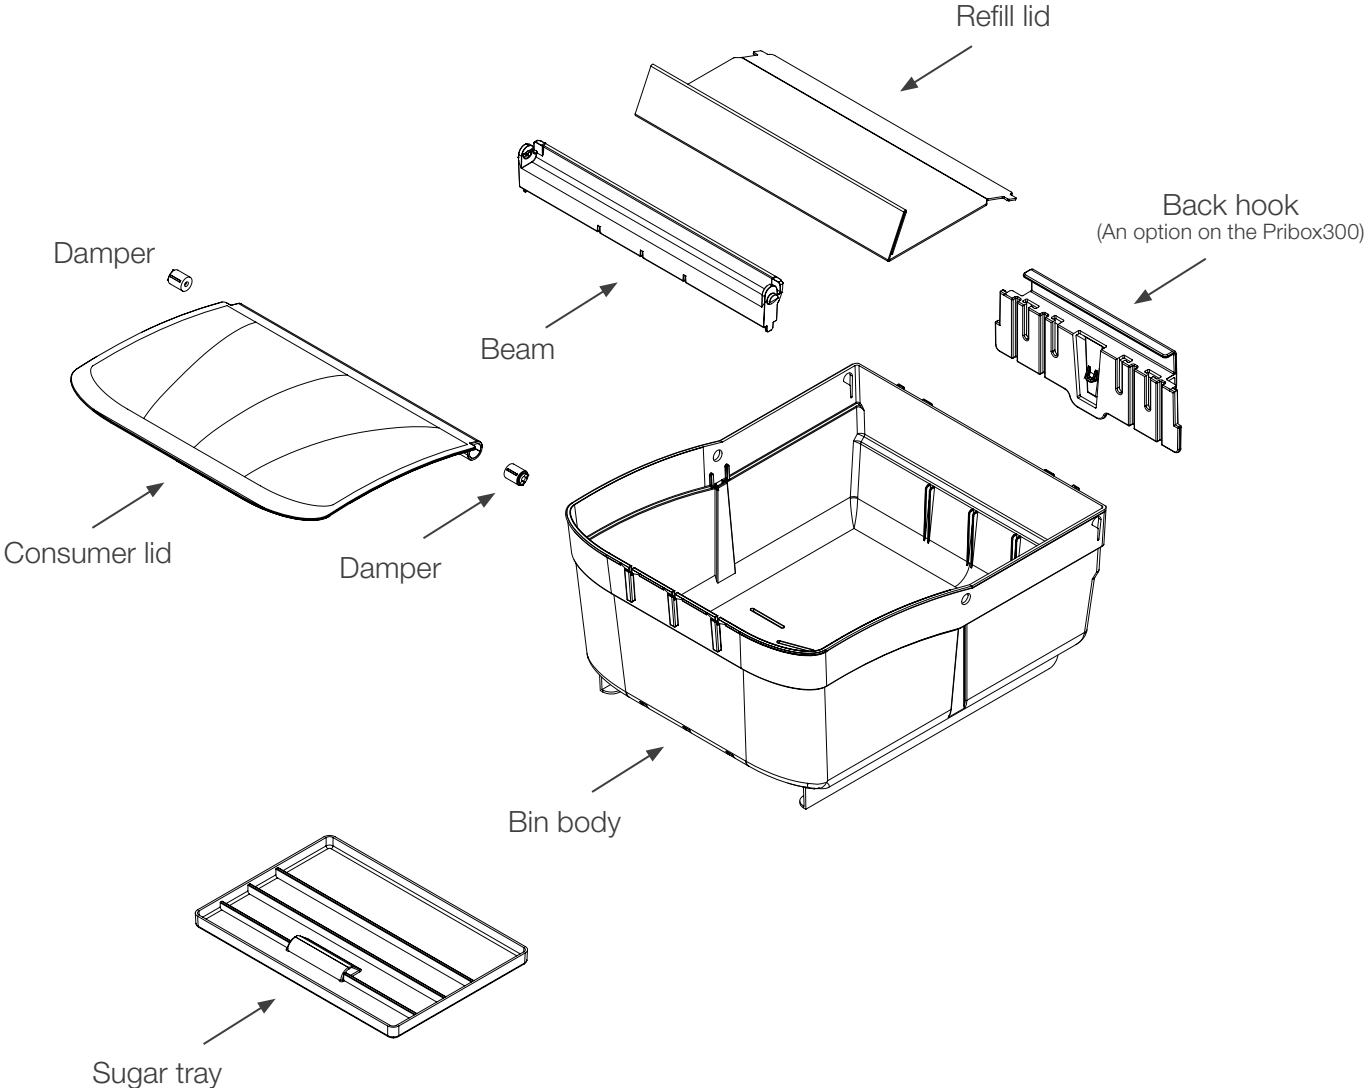

Bin disassembling

To disassemble, follow the instructions below:

- 1 Pull out the sugar tray



- 2 Remove refill lid by bending one side



- 3 Pull out the bin body on one side and release the beam. Then pull out the bin body on the other side. Once both sides of the beam are released, remove it by pulling straight up



- 4 Remove consumer lid from beam by bending one side



Bin disassembling *(cont.)*

To disassemble, follow the instructions below:

5 Divider is an option – Pull up to remove



6 Back hook is an option – Pull out to release clip then push down to remove



Bin assembling

To assemble, follow the instructions below:

- 1** Back hook is an option – Align clip and push up to lock it



- 2** Divider is an option – Align between ribs and push down



- 3** Add damper to consumer lid. Bend one side of consumer lid and attach to beam



- 4** Align beam with bin body and push down on both sides



Bin assembling *(cont.)*

To assemble, follow the instructions below:

- 5 Bend one side of refill lid and align with openings in bin body



- 6 Slide back the sugar tray



HL DISPLAY AB

Cylindervägen 18 Box 1118
131 26 Nacka Strand, Sweden

Tel +46 8 683 73 00

www.hl-display.com
info@hl-display.com

