



QuickBox

Maintenance & cleaning

Cleaning

The recommended frequency of cleaning will depend on the stock rotation speed and on the type of food product displayed. For instance, fat or oily products require more frequent cleaning.

Daily Cleaning

For regular cleaning a disinfectant based on Chlorine Dioxide (ClO₂) is preferable.

Do not use an alcohol-based disinfectant.

Alcohol-based disinfectants will make the plastic brittle and shorten the lifetime of the bin.



Total cleaning

Disassemble all the parts of the QuickBox.

Wash with soap and warm water

Hand washing is preferable to limit exposure to high temperature.

Or use a dishwasher


Settings should be at lowest possible temperature and shortest duration (below 50°C and always in the top tray).



Some customers prefer not to do the cleaning themselves - your HL Display representative can help you source a cleaning service for your bulk bins.

Component overview

The **QuickBox** consists of these components.

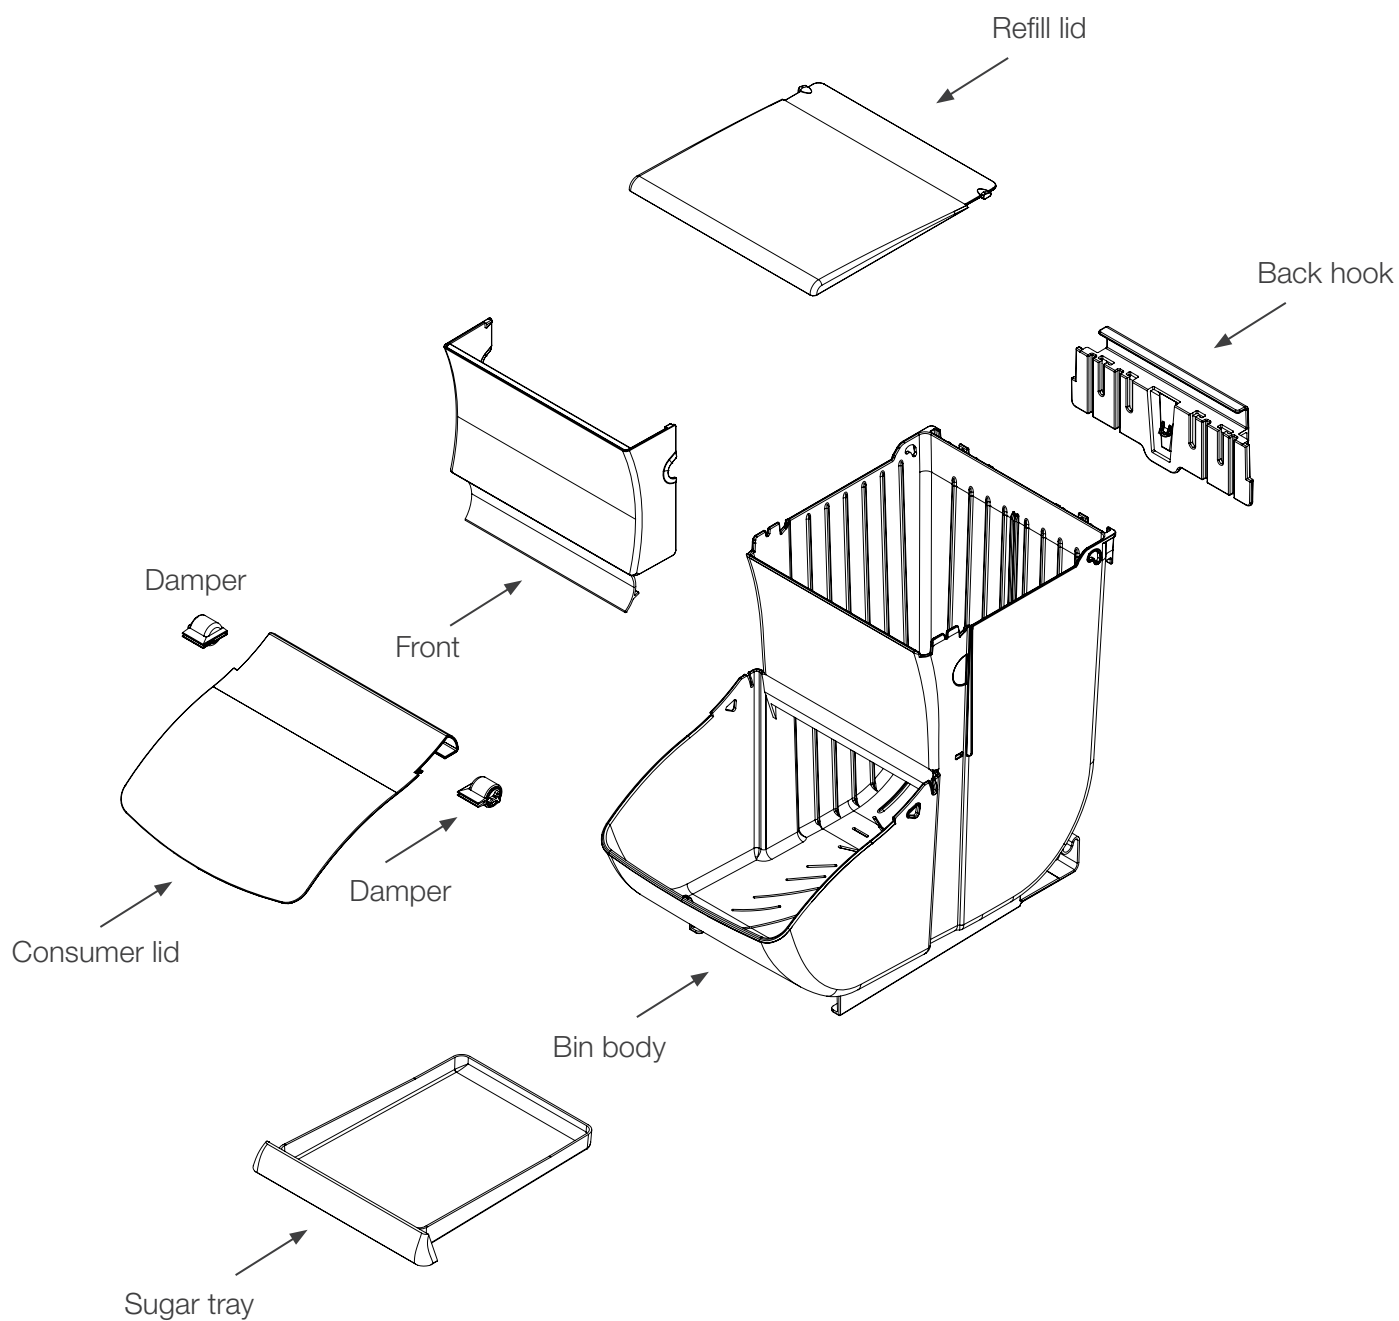

Bin disassembling

To disassemble, follow the instructions below:

- 1 Pull out the sugar tray.



- 2 Remove refill lid by bending one side.



- 3 Remove consumer lid from bin by bending one side.



- 4 Remove dampers on both sides. Clean the hinges with a dry cloth. Do NOT place the hinges in water.



Bin disassembling *(cont.)*

To disassemble, follow the instructions below:

- 5** Gently bend the large bottom piece outwards while pulling the back hook DOWN.



- 6** Remove the front.



- 7** Divider is an option – pull up to remove.



Bin assembling

To assemble, follow the instructions below:

- 1** Attach the front.



- 2** Add dampers: one white and one grey to consumer lid.



- 3a** Bend one side of consumer lid and attach to hinge.



- 3b** Twist the hinge so that the longest tip of the three matches the triangular hole on the bin.



Bin assembling *(cont.)*

To assemble, follow the instructions below:

- 4a** Bend one side of refill lid and align with openings in bin body.



- 4b** Before pulling the refill lid out make sure it is located in a top part of the slot, which is bigger.



- 5** Align clip and push up to lock it.



- 6** Slide back the sugar tray.



HL DISPLAY AB

Cylindervägen 18 Box 1118
131 26 Nacka Strand, Sweden

Tel +46 8 683 73 00

www.hl-display.com
info@hl-display.com

