



**Pribox™**

Maintenance & cleaning

## Cleaning

The recommended frequency of cleaning will depend on the stock rotation speed and on the type of food product displayed. For instance, fat or oily products require more frequent cleaning.

### Daily cleaning

For regular cleaning a disinfectant based on Chlorine Dioxide (ClO<sub>2</sub>) is preferable.

### Do not use an alcohol-based disinfectant.

Alcohol-based disinfectants will make the plastic brittle and shorten the lifetime of the bin.



### Total cleaning

Disassemble all the parts of the Pribox™.

#### Wash with soap and warm water

Hand washing is preferable to limit exposure to high temperature.

#### Or use a dishwasher for these parts

Bin body, sugar tray and scoop.

Settings should be at lowest possible temperature and shortest duration (below 50°C and always in the top tray).




Some customers prefer not to do the cleaning themselves - your HL Display representative can help you source a cleaning service for your bulk bins.

## Component overview

The **Pribox™** consists of these components.

*Note: The Pribox™ 150 only have one damper, it's placed on the left side*

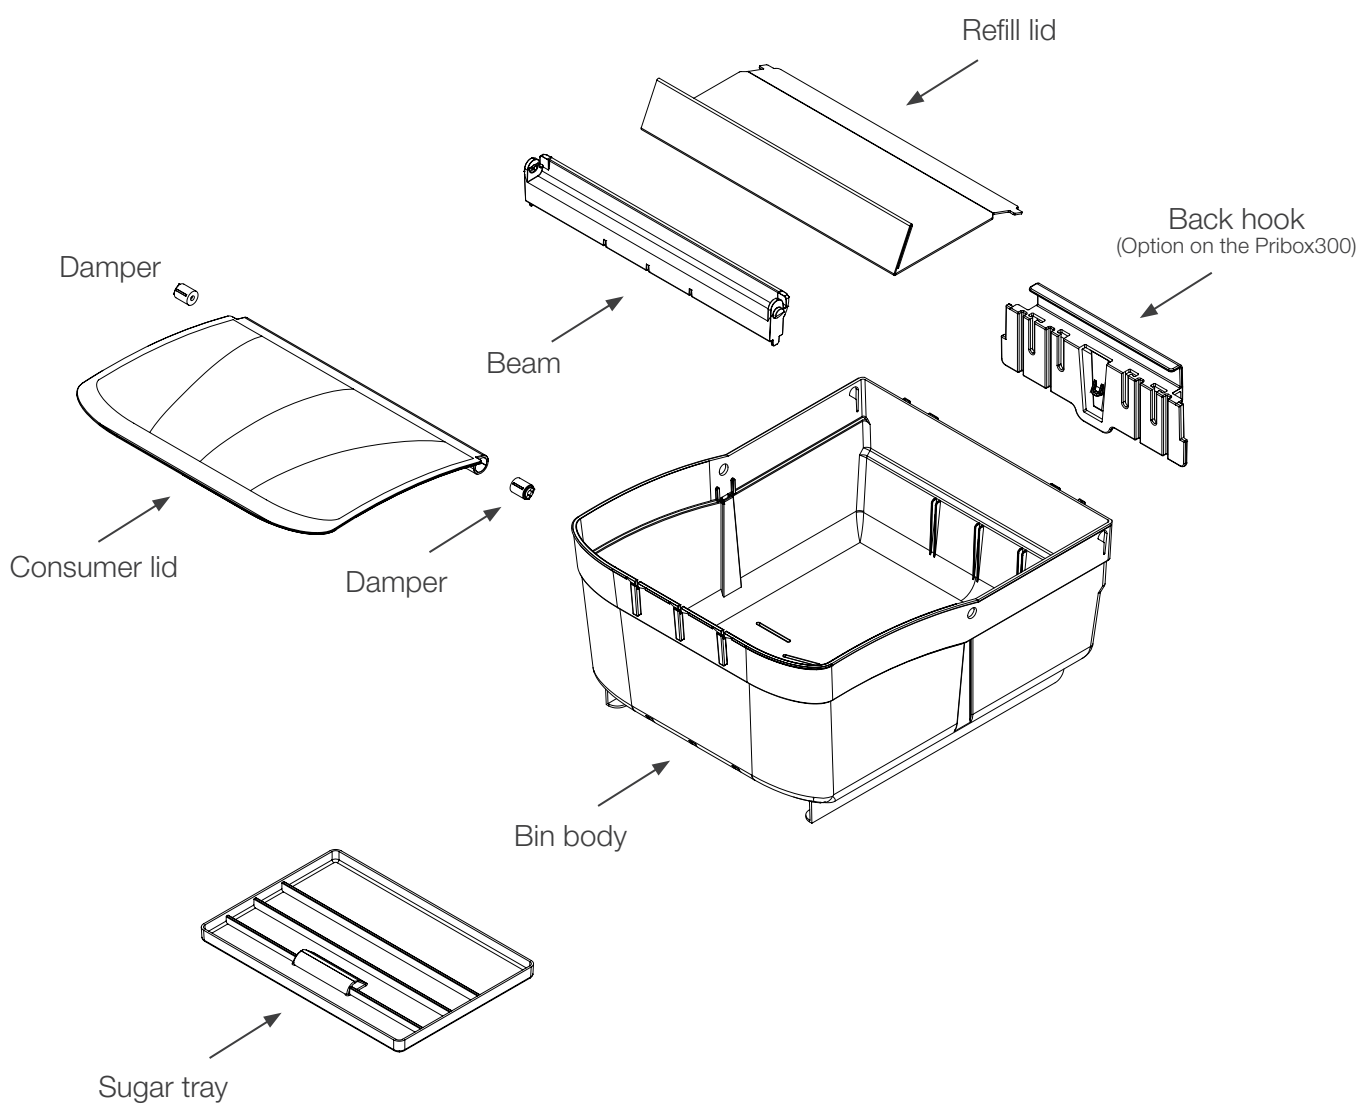

# Bin disassembling

To disassemble, follow the instructions below:

- 1 (Optional)** Demount the hook. Lift the latch outwards and push.

*If needed: Place the base bin on a hard and stable surface, lift the latch and knock with the palm of your hand on the top of the back hook to loosen it downwards.*



- 2** Remove refill lid by bending one side.



- 3** Pull out the bin body on one side and release the beam. Then pull out the bin body on the other side. Once both sides of the beam are released, remove it by pulling straight up.



- 4** Remove the consumer lid from the beam by bending one side and pulling out the dampers out of the grooves.



## Bin disassembling (cont.)

To disassemble, follow the instructions below:

- 5** Grab the dampers with a tong and pull them out.



- 6 (Optional)** Remove the scoop holder.

*If needed: Place both your thumbs in the scoop holder. Push the scoop holder down and out so that the lower bracket comes loose. Pull the scoop holder outwards.*



- 7 (Optional)** Pull the divider up to remove it.



- 8** Pull out the sugar tray.



# Bin assembling

To assemble, follow the instructions below:

- 1** Slide back the sugar tray all the way until it clicks.




- 2 (Optional)** Mount dividers, align between ribs. Push down. Divider will slide into straight sugar slits at the bottom.




- 3a** Add two dampers to the sides of consumer lid.

*Note: The Pribox™ 150 only have one damper, it's placed on the left side*

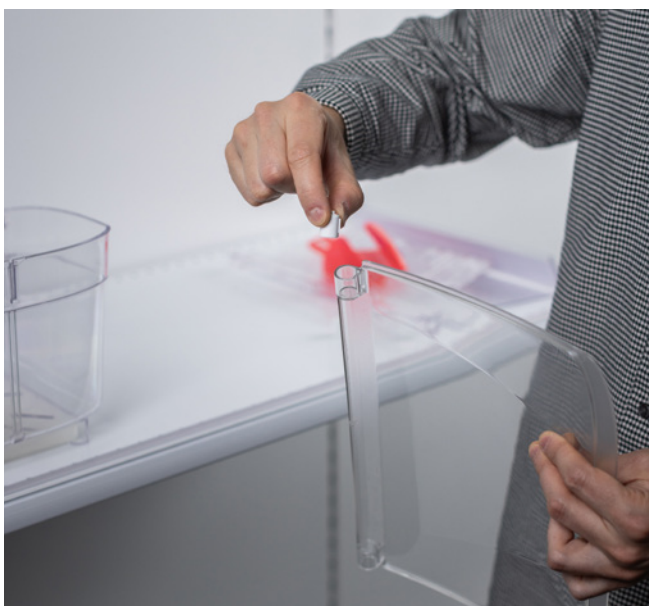

- 3b** Make sure that the pegs face outward and that the guide ridge on the damper fits into the cut-out groove.

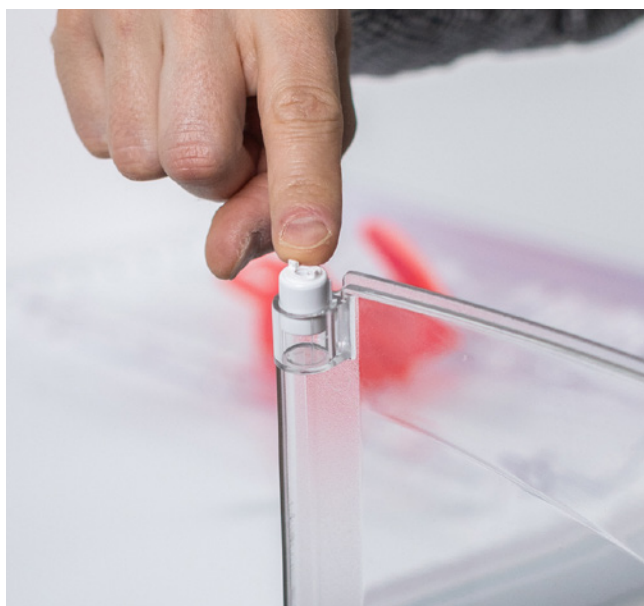

## Bin assembling *(cont.)*

To assemble, follow the instructions below:

- 4a** Bend one side of consumer lid to attach it to the beam. Make sure the lid is facing the right way in relation to the beam.



- 4b** Start with one side and then bend the lid slightly to put the other side in. The lid will snap into place and be able to fold back and forth.



- 5a** Align beam with bin body and push down on both sides.



- 5b** Make sure the beam guide pegs are properly placed in the holes in the base bin on both sides.



## Bin assembling (cont.)

To assemble, follow the instructions below:

- 6 (Optional)** Slide in your communication insert.


**Note:** Communication can also be added after the bin has been fully mounted



- 7a** Attach the top lid. Put the side hooks of the top lid in the holes at the back of the base bin.



- 7b** Start with one side, then bend the lid gently to place the other side.

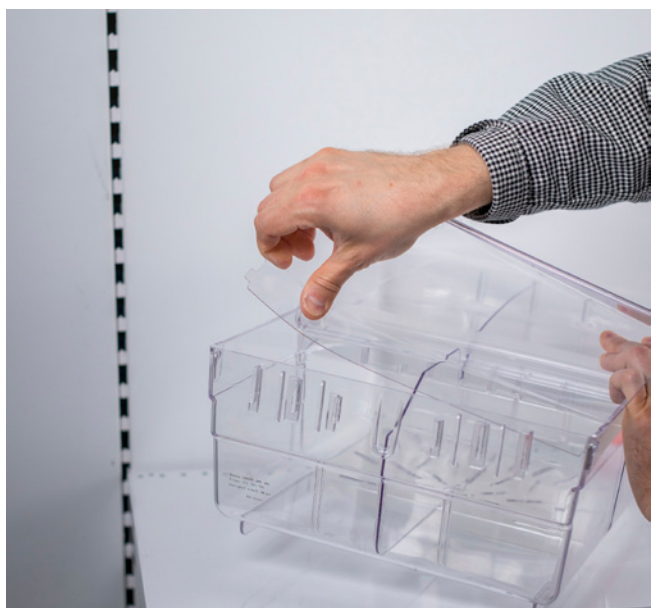

- 8 (Optional for PB300)** Attach the back hook. Slide it upwards, into the grooves. Make sure the small flexible latch in the center of the back hook lock on and snaps into the base bin.



## Bin assembling (cont.)

To assemble, follow the instructions below:

- 9a (Optional for PB300)** Attach the scoop holder. Open the consumer lid and mount the scoop holder onto the hook.

**Note:** The PB150 has a taped scoop holder



- 9b** Press it onto the small hook underneath until it snaps into the bottom slot.



- 10 (Optional for PB300)** Attach the scoop.



**HL DISPLAY AB**

Cylindervägen 18 Box 1118  
131 26 Nacka Strand, Sweden

Tel +46 8 683 73 00

[www.hl-display.com](http://www.hl-display.com)  
[info@hl-display.com](mailto:info@hl-display.com)

