

# LM Tag™ - Activation and deactivation instructions

## APPLY TO PACKAGE FOR THEFT DETERRENT



LM Tag



Adhesive pads



Strobe light

## APPLICATION



Remove the protective film from the adhesive pad on base of LM Tag.



Apply to package. Be sure the button on base of tag is completely concealed and hold firmly.



After tag is attached, confirm actuation by the confirmation tone and red flashing light that indicated proper actuation, within 10 seconds. Tag will be dormant for 3-5 minutes, after which the light and motion sensors are silently activated.

## DEACTIVATION



To deactivate LM Tag, place the strobe light so the strobe lens completely covers the lens on the tag.



Hold the strobe light against the light sensor lens and press the button for 3 seconds. Hold the deactivator in place until it gives a long beep to indicate it is deactivated. You have 10 seconds to remove the tag before it is automatically reactivated.



Peel tag from package. Once removed, the tag will remain dormant until reapplied.

# LM Tag™ - Activation and deactivation instructions

## RE-USE TAG - REPLACE ADHESIVE



Remove old adhesive and discard.



Remove liner from replacement adhesive and place on tag.



Align hole in adhesive with button on tag

## REPEAT APPLICATION



Remove liner from adhesive on base of tag.



Apply to package. Make sure the button on base of tail is completely concealed and pressed in.



After tag is attached, it will beep in about 10 seconds to indicate it was properly attached. Tag will be dormant for 3 minutes, after which the light and motion sensor are silently activated.

## TROUBLE SHOOTING ALARM

Alarm goes off for no apparent reason while the package is sitting undisturbed on the shelf.

### Solution

- Check adhesive and replace. Use alcohol wipe to clean package surface.
- Ensure the device plunger is fully engaged with the surface.
- Ensure any product packaging is secure and not loose on the LM Tag surface.